


ASSEMBLY INSTRUCTION

ITEM#: 171929 171930 171931 111-5C
192618 202669

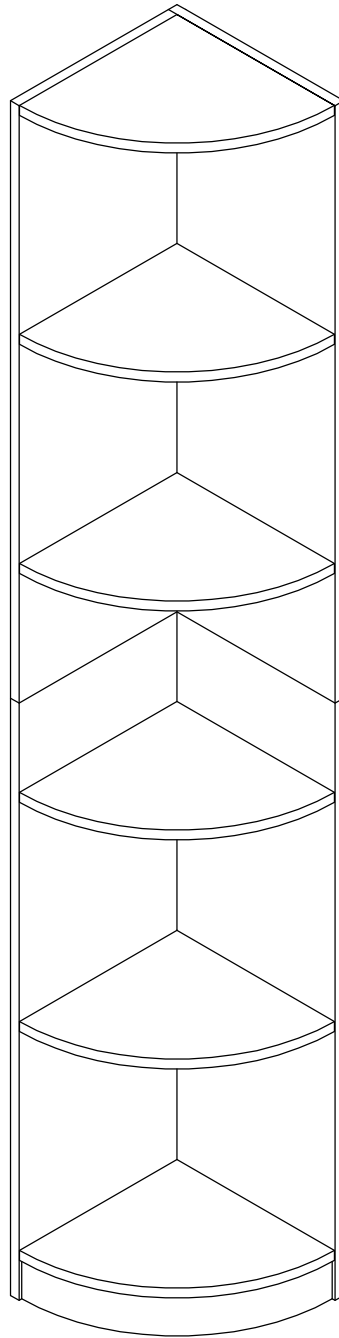

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 171929 171930 171931 111-5C
192618 202669

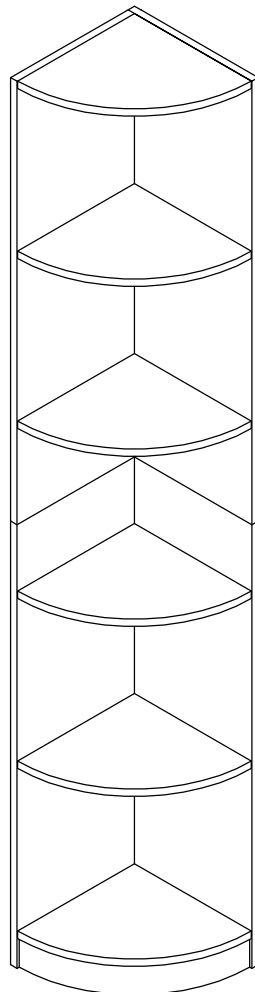

PARTS IDENTIFICATION




ITEM#: 171929 171930 171931 111-5C
192618 202669

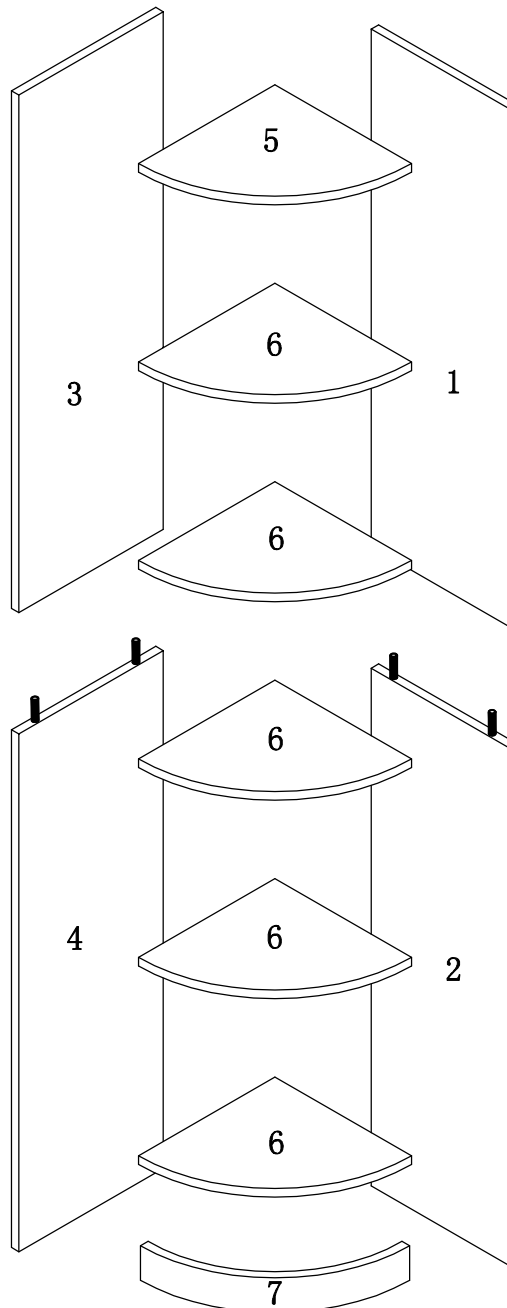


(1)	1pc	(4)	1pc
(2)	1pc	(5)	1pc
(3)	1pcs	(6)	5pcs
		(7)	1pc

HARDWARE IDENTIFICATION

ITEM#: 171929 171930 171931 111-5C
192618 202669


A		$\phi 4 \times 35$	30pcs
B		$28 \times 20 \times 20$	3pcs
C		$\phi 3.5 \times 12$	20pcs
D			2pcs
E		$\phi 8 \times 25$	12pcs
F		$\phi 16$	4pcs
G		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
H		$\phi 4 \times 25$	1pc
I		$\phi 5 \times 40$	1pc
J			1pc
K			1pc
L			2pc

STEP1

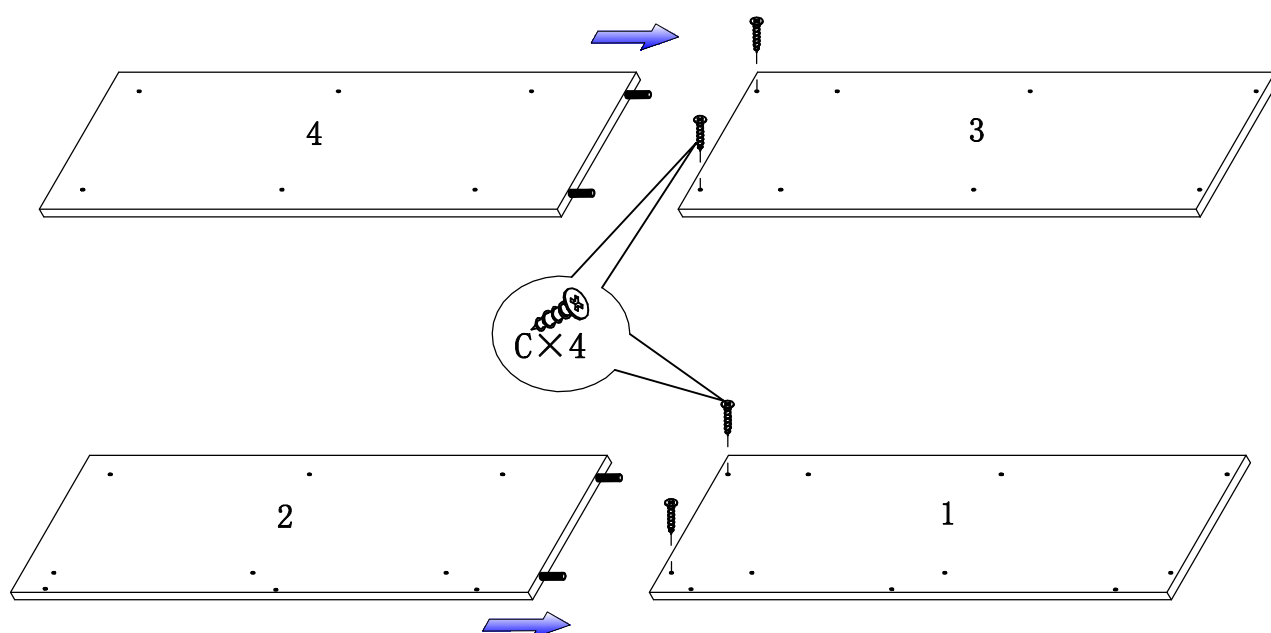


ASSEMBLY INSTRUCTION

ITEM#:171929 171930 171931 111-5C
192618 202669

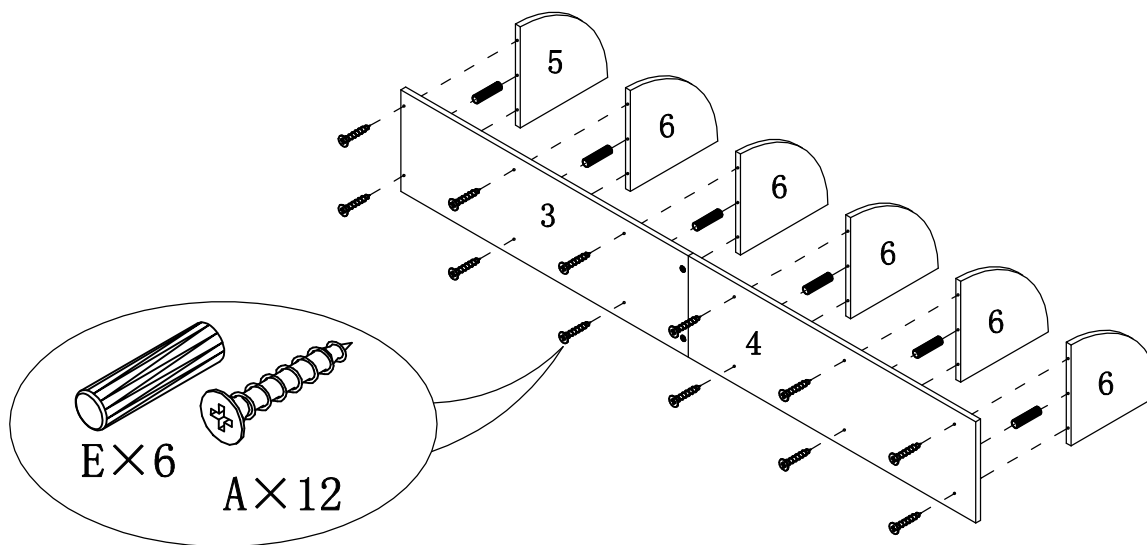

STEP2

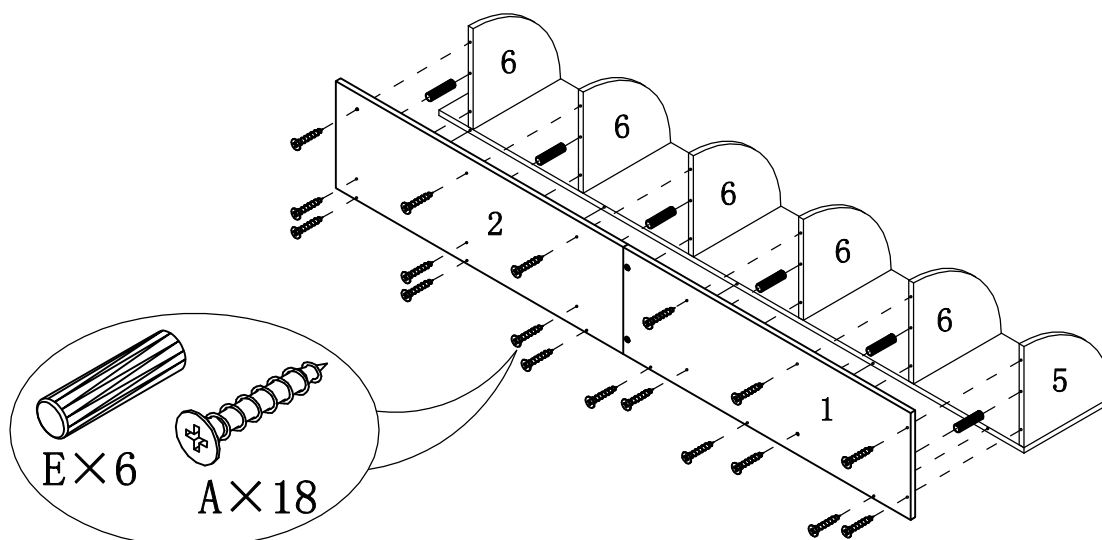


STEP3

PAGE:4 OF 5


ASSEMBLY INSTRUCTION

ITEM#:171929 171930 171931 111-5C
192618 202669

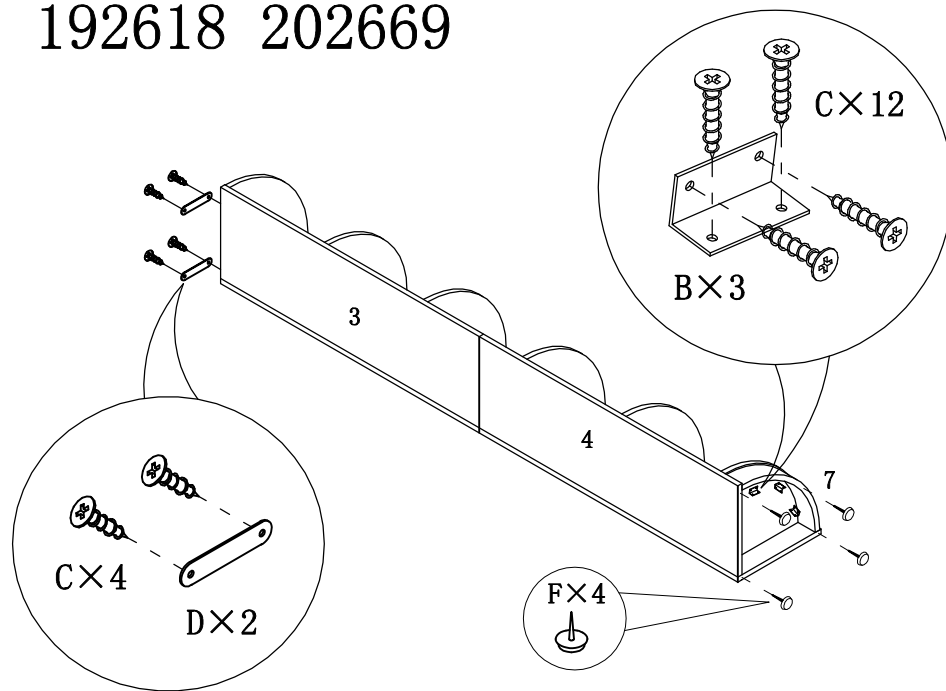


STEP4

STEP5

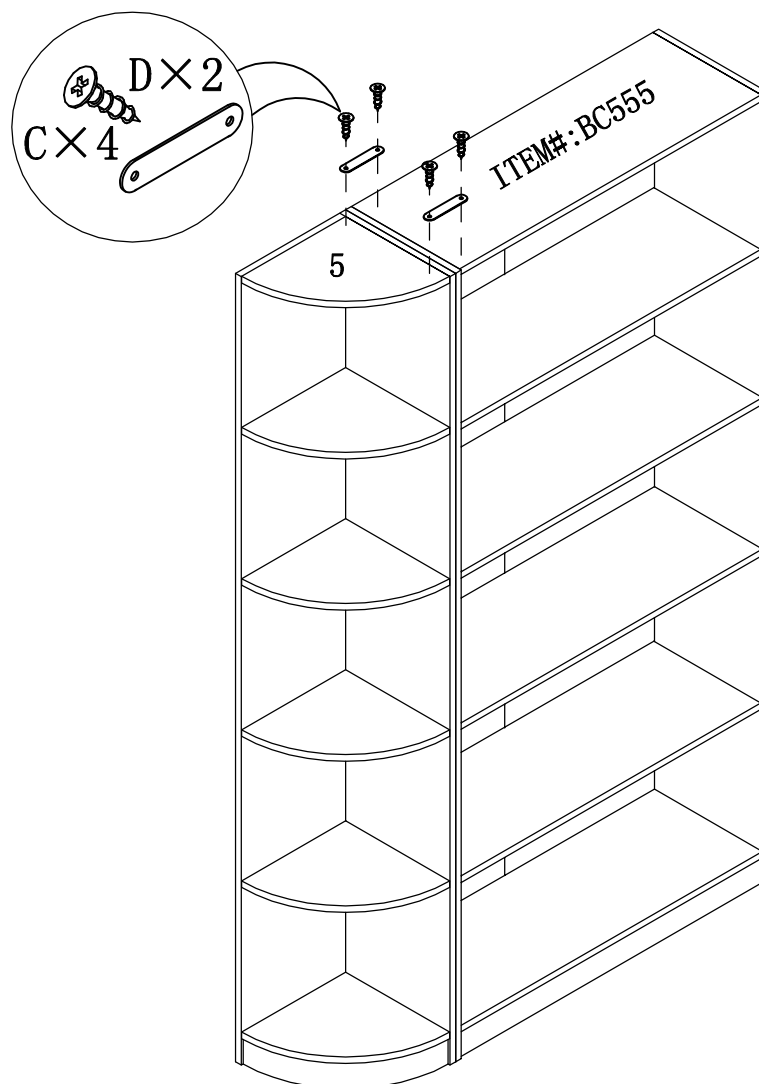


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

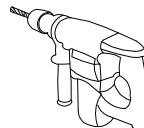


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

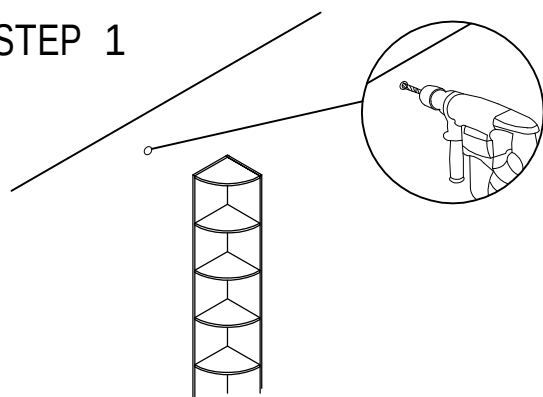


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

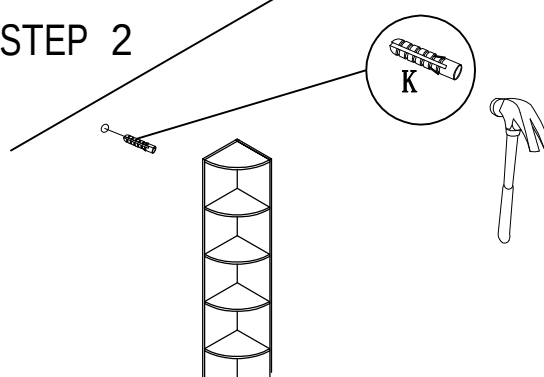


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

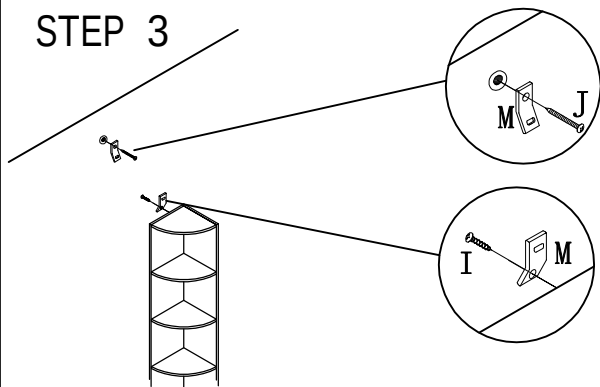

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

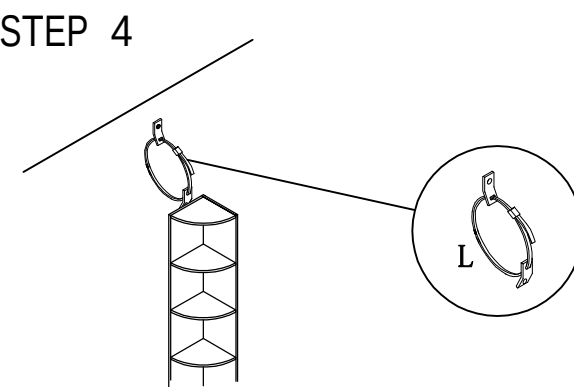

1. Insert strap thru bracket attached to wall. then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.