


ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.


Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

ITEM#:88454 263496

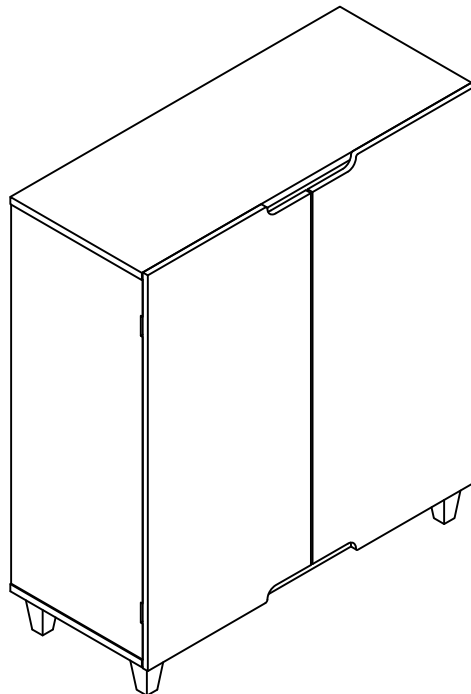


PARTS IDENTIFICATION

ITEM#:88454 263496




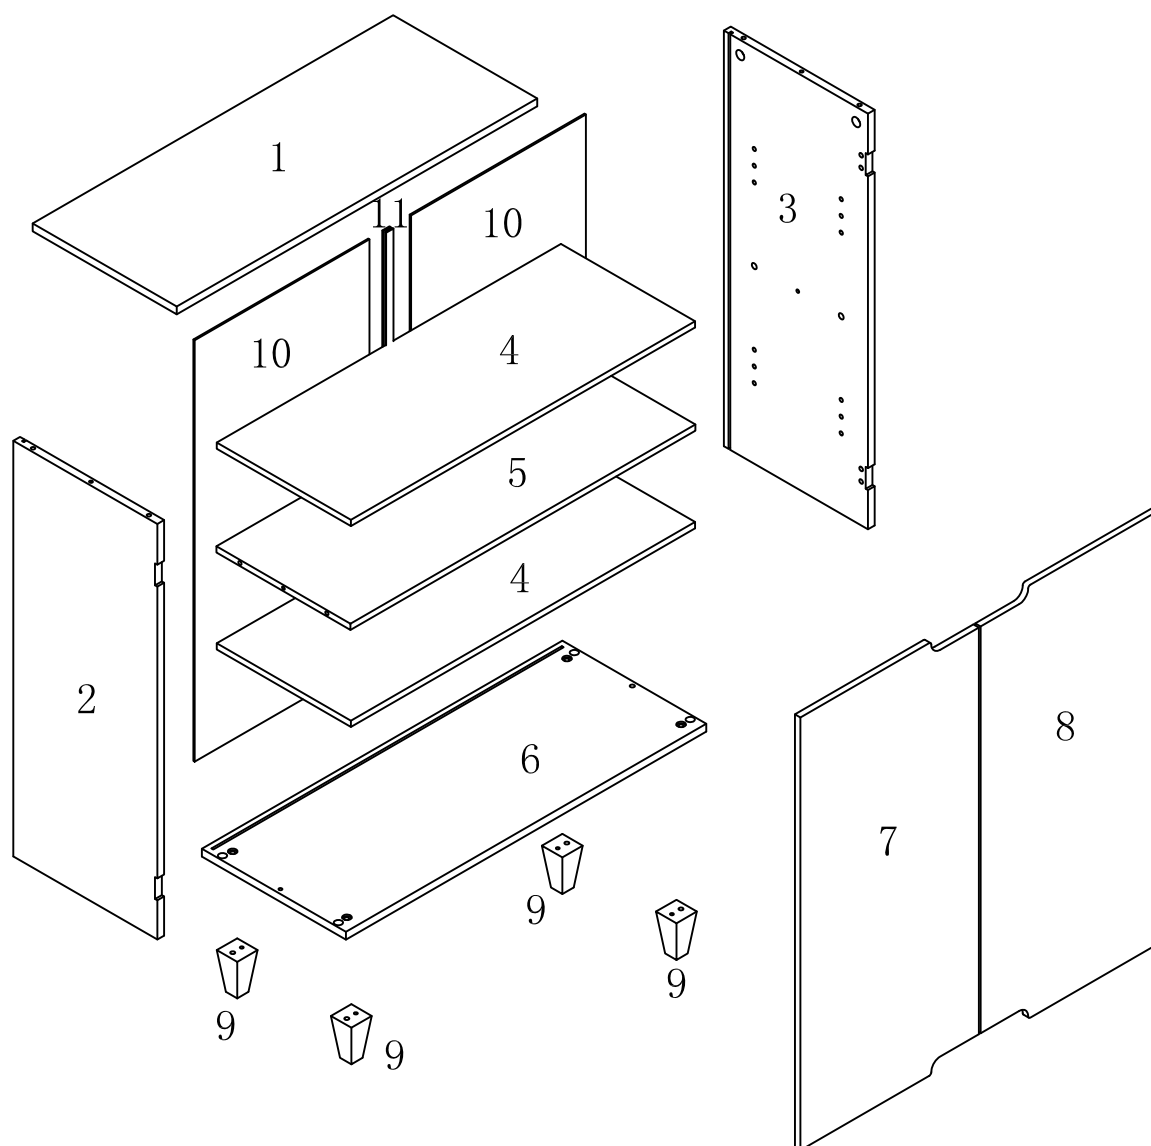


(1)	1pc	(7)	1pc
(2)	1pc	(8)	1pc
(3)	1pc	(9)	4pcs
(4)	2pcs	(10)	2pcs
(5)	1pc	(11)	1pc
(6)	1pc		








HARDWARE IDENTIFICATION

ITEM#:88454 263496


A		L29	8PCS
B		Φ 15	8PCS
C		Φ 6x30	10PCS
D		Φ 4x35	4PCS
E			10PCS
F		Φ 3x16	14PCS
G		Φ 3.5x12	20PCS
H		Φ 5x15	8PCS
I			2PCS
J		45x12x1	2PCS
K		40x15	4PCS
L		Φ 22	4PCS
M		Φ 6x25	4PCS
N		Φ 16x6x2	4PCS
O		M4	1PC
P		4.5 × 1 × 254	1PC
Q		4 × 25	1PC
R		5 × 40	1PC
S		14 × 36	1PC
T		12 × 12 × 1	2PCS

HARDWARE IDENTIFICATION

ITEM#:88454 263496

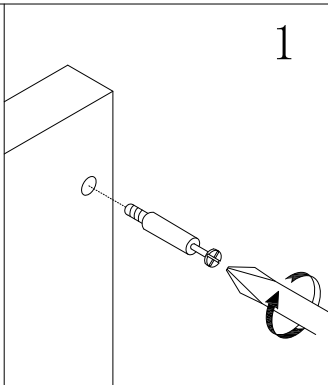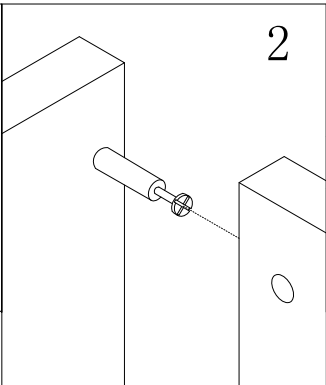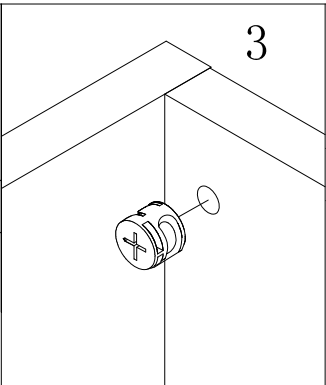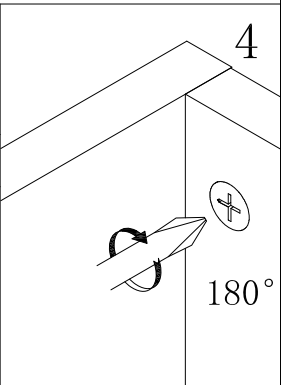HOW TO	1	2	3	4
				
 Cam Bolt  Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.


STEP1

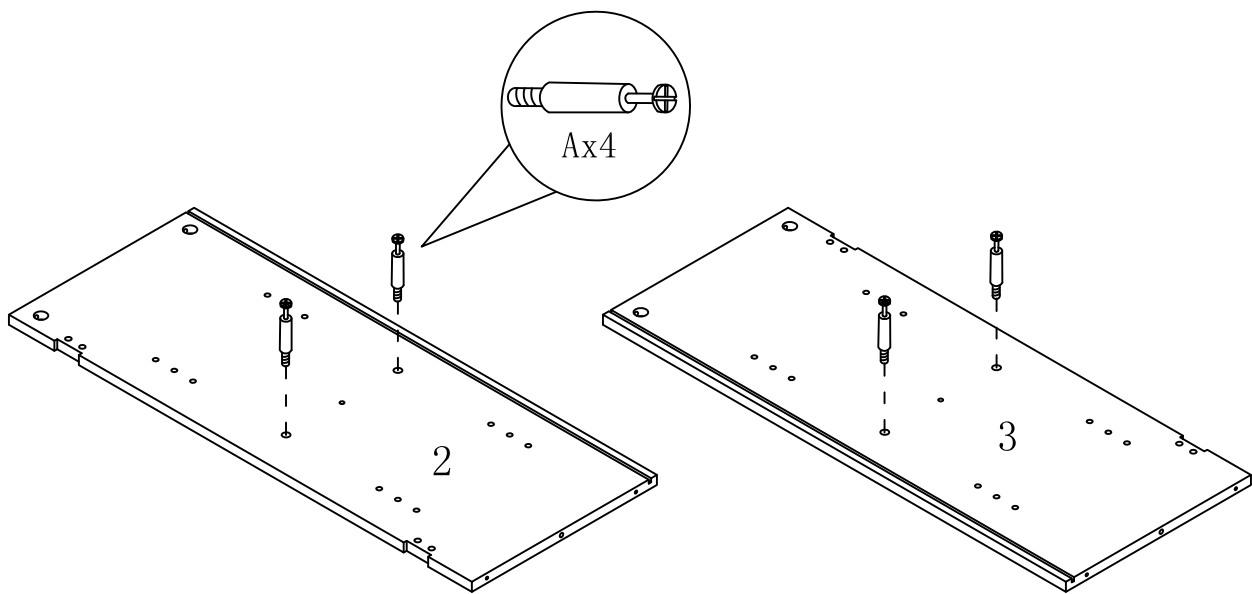

HARDWARE IDENTIFICATION

ITEM#:88454 263496


STEP2

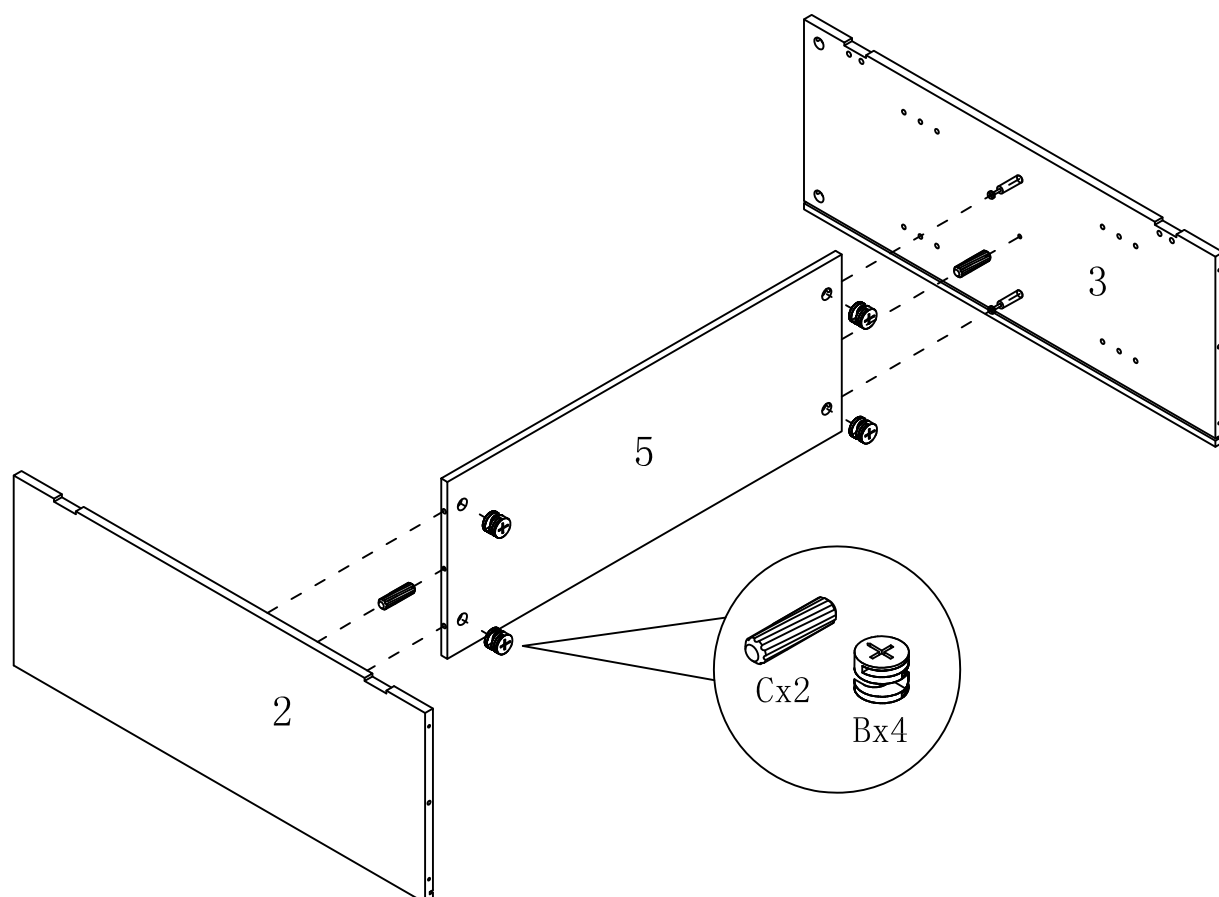


HARDWARE IDENTIFICATION

ITEM#:88454 263496

STEP3

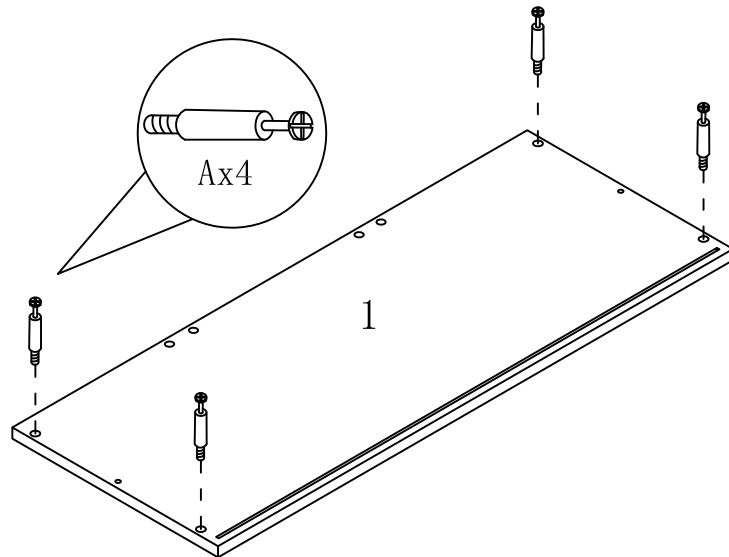


STEP4

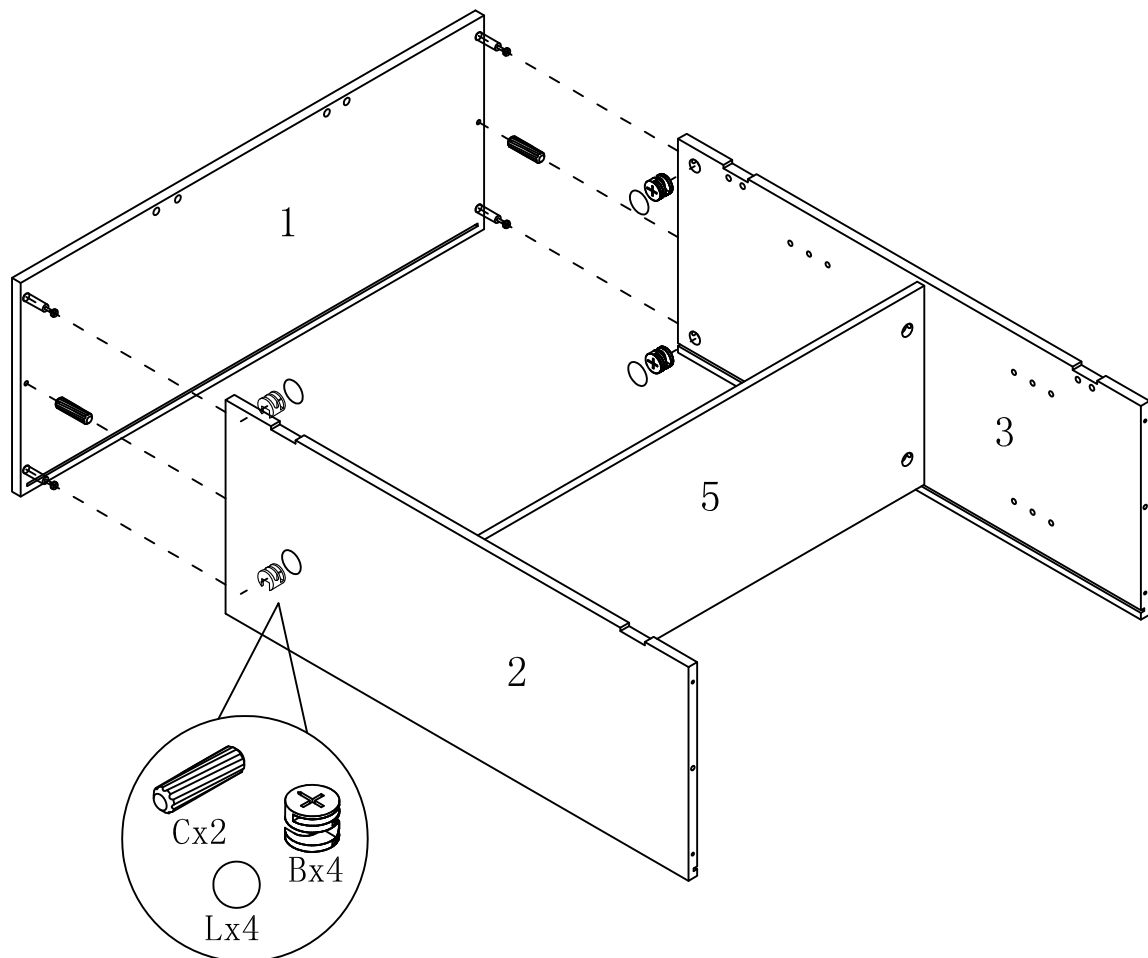


HARDWARE IDENTIFICATION

ITEM#:88454 263496

STEP5

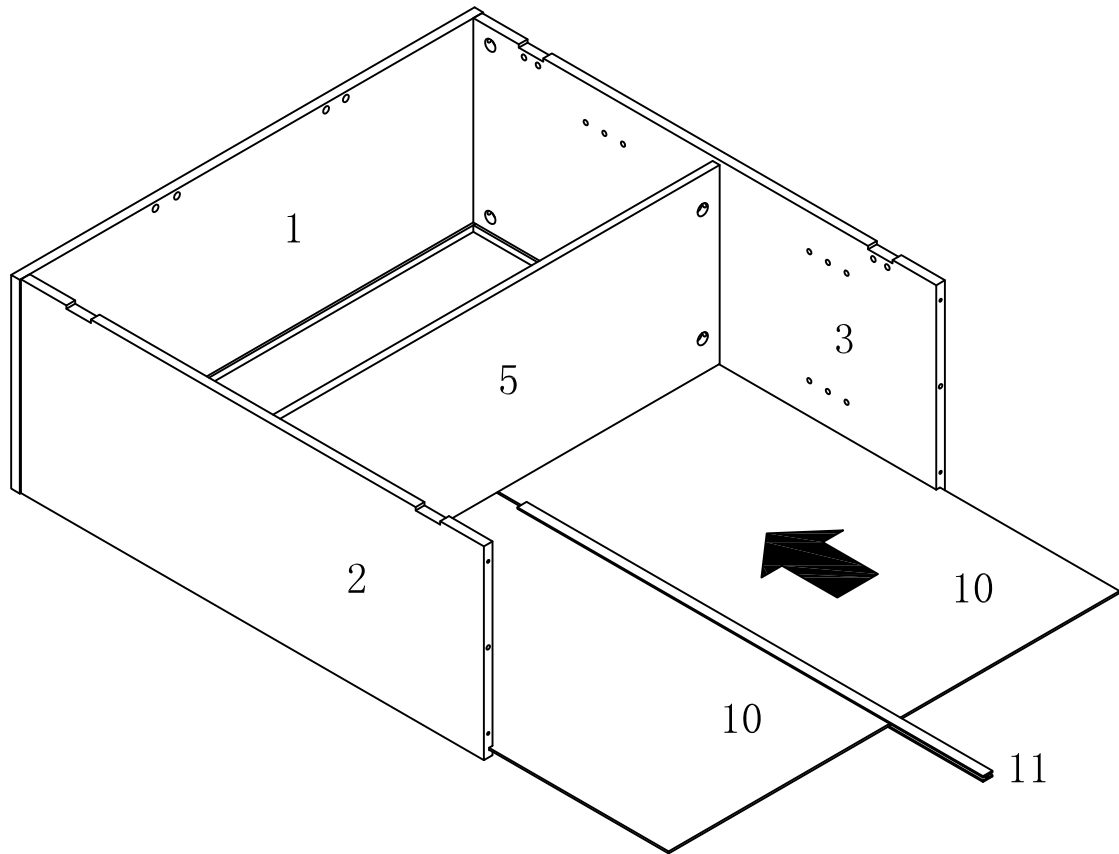


STEP6

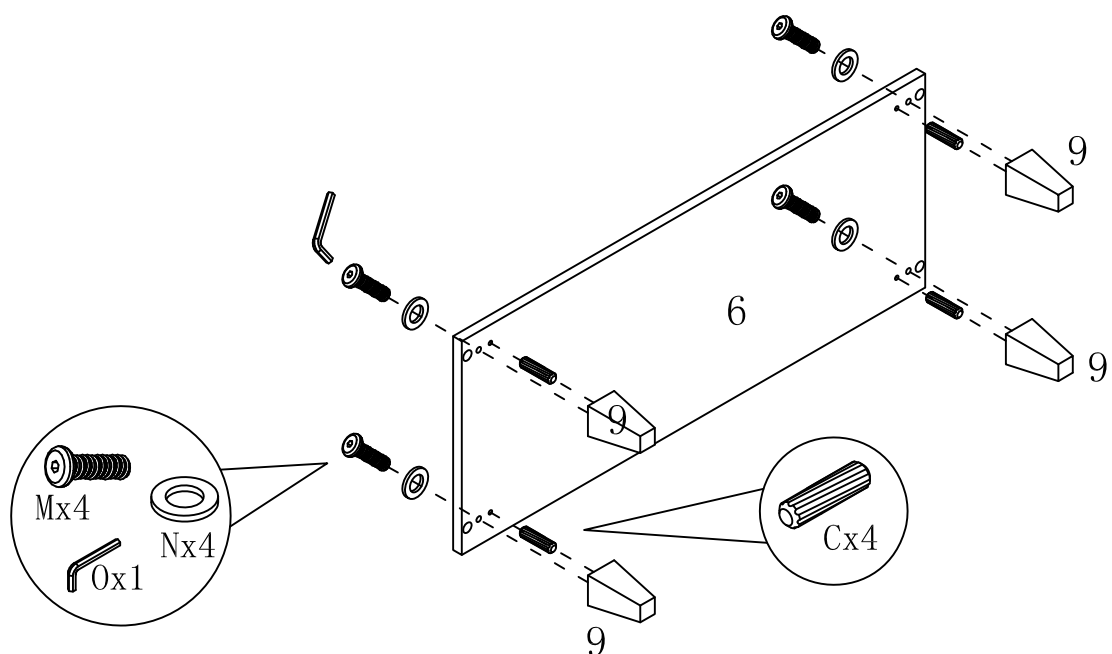

HARDWARE IDENTIFICATION

ITEM#:88454 263496


STEP7

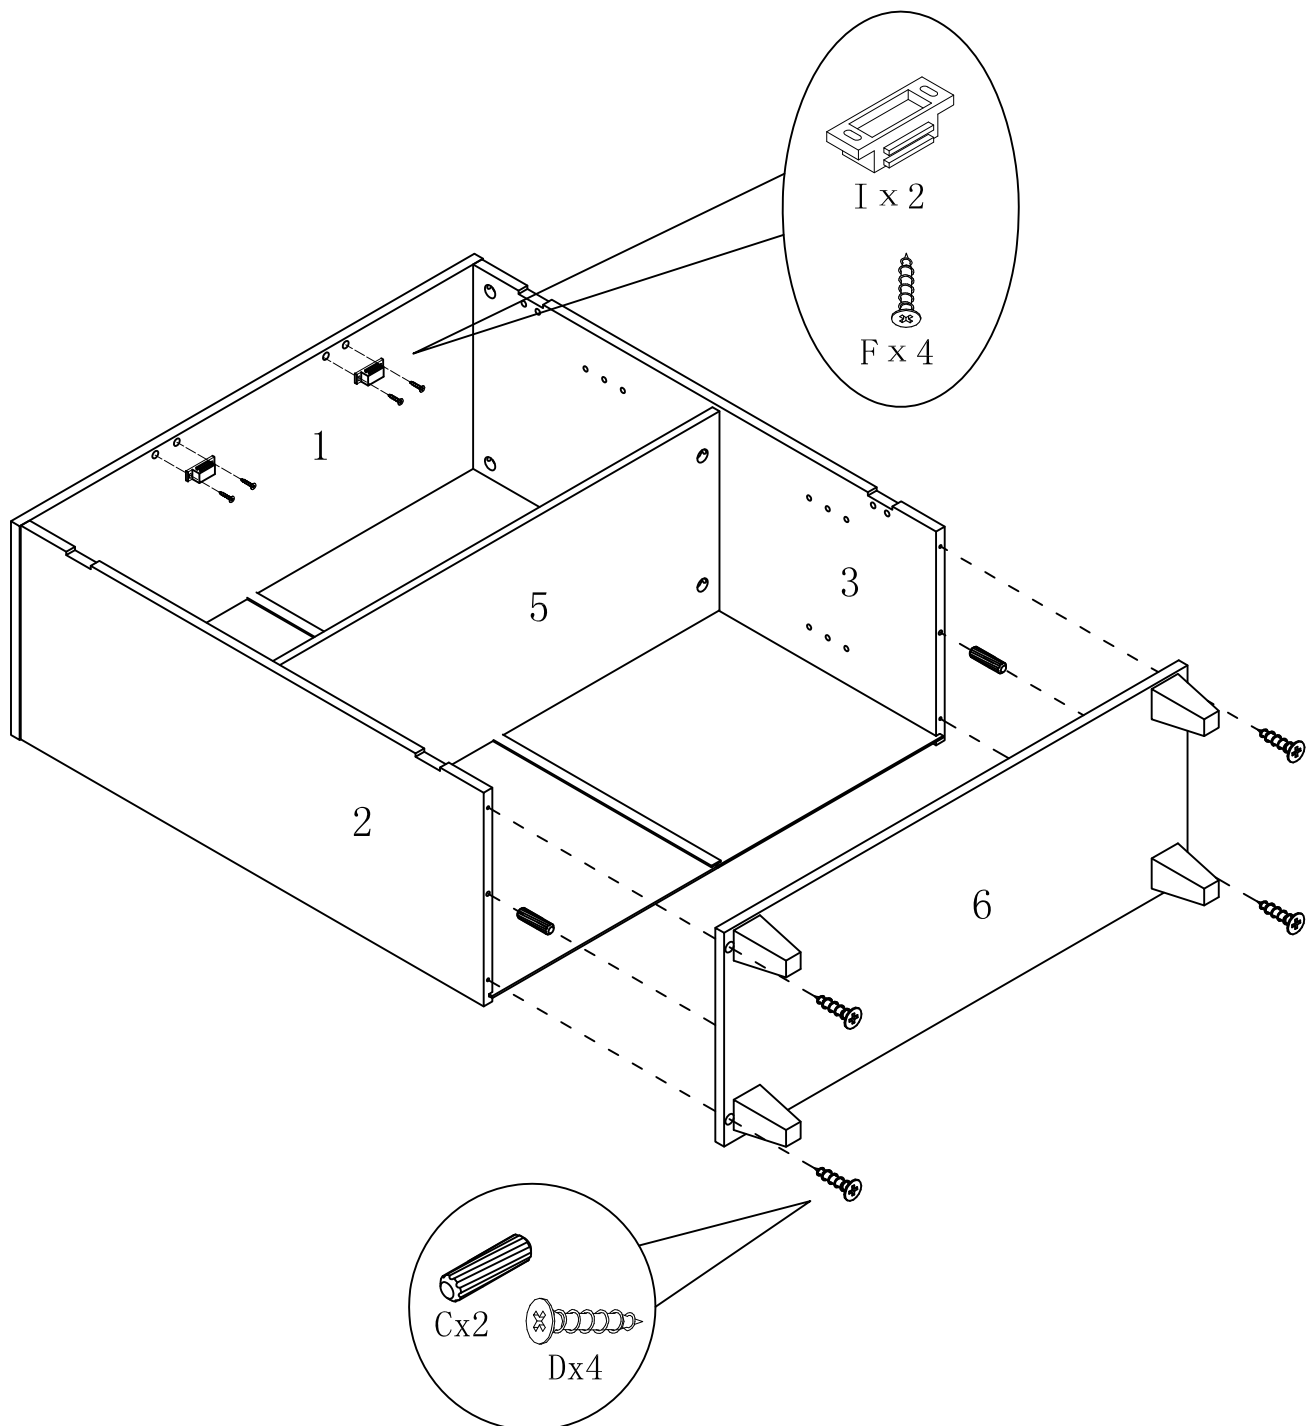

HARDWARE IDENTIFICATION

ITEM#:88454 263496



STEP8

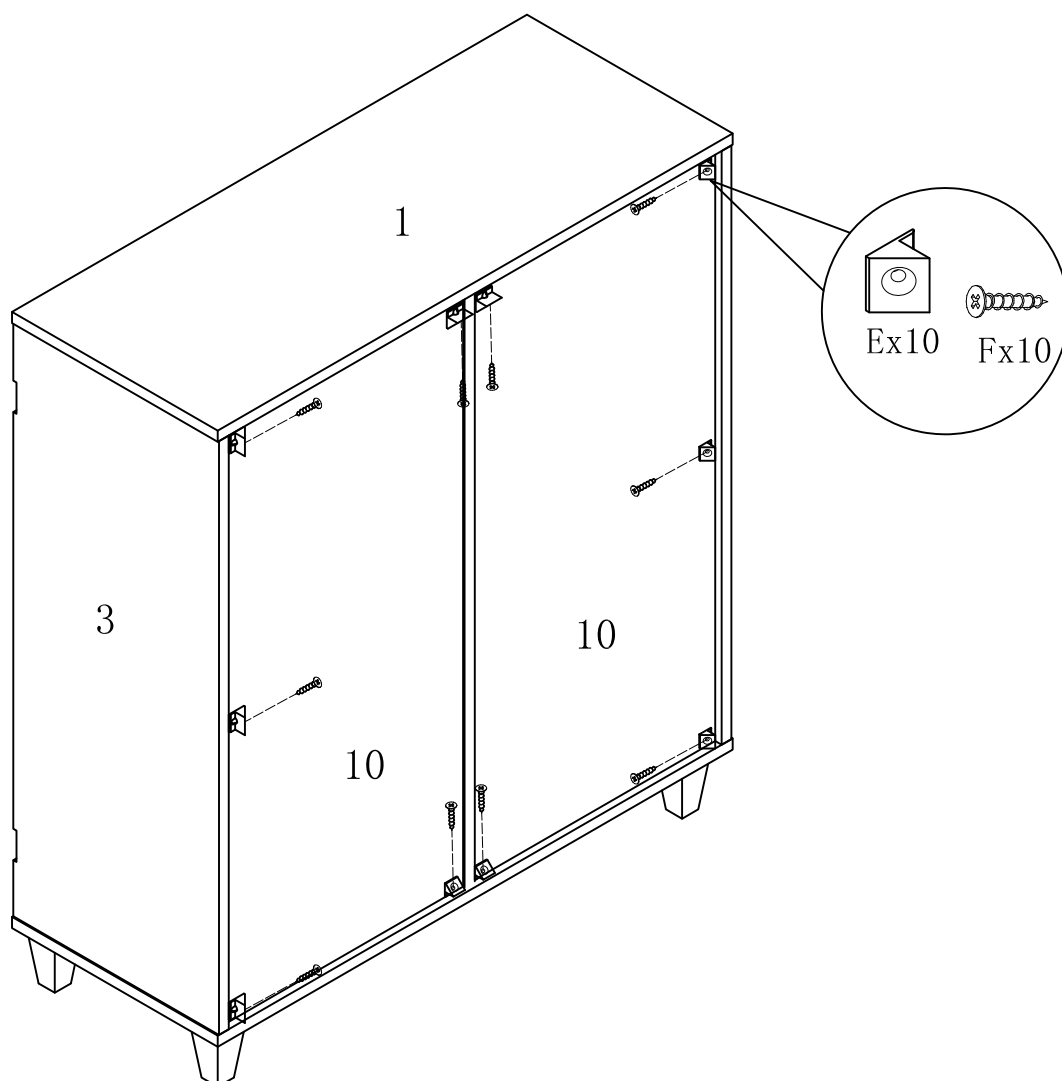

HARDWARE IDENTIFICATION

ITEM#:88454 263496


STEP9

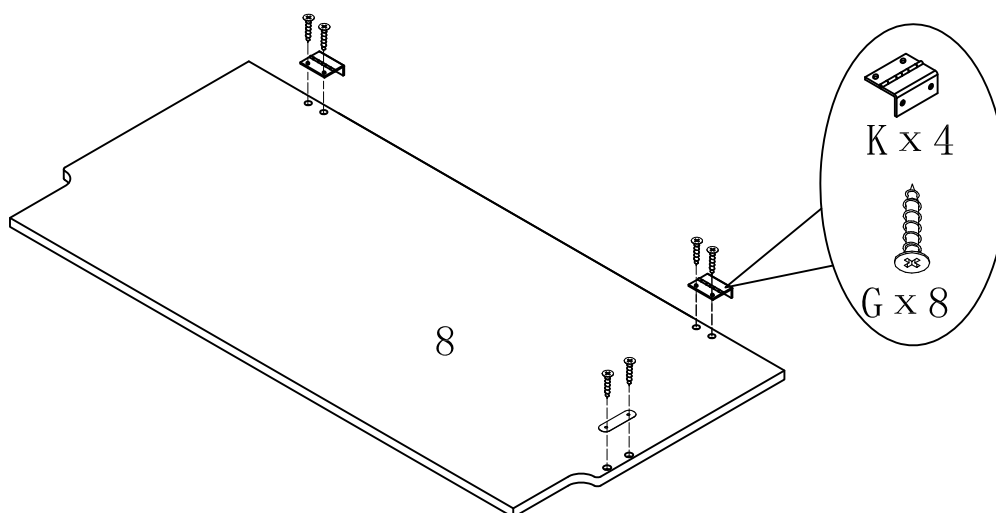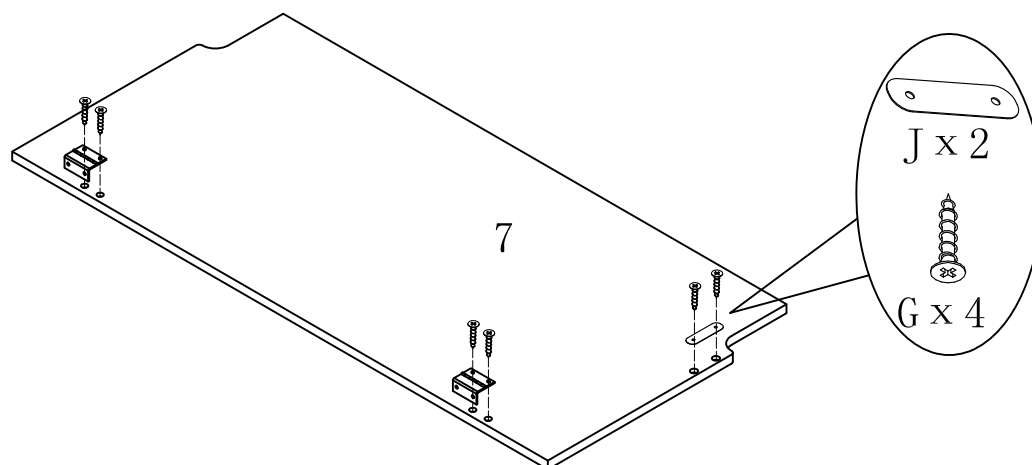

HARDWARE IDENTIFICATION

ITEM#:88454 263496


STEP10

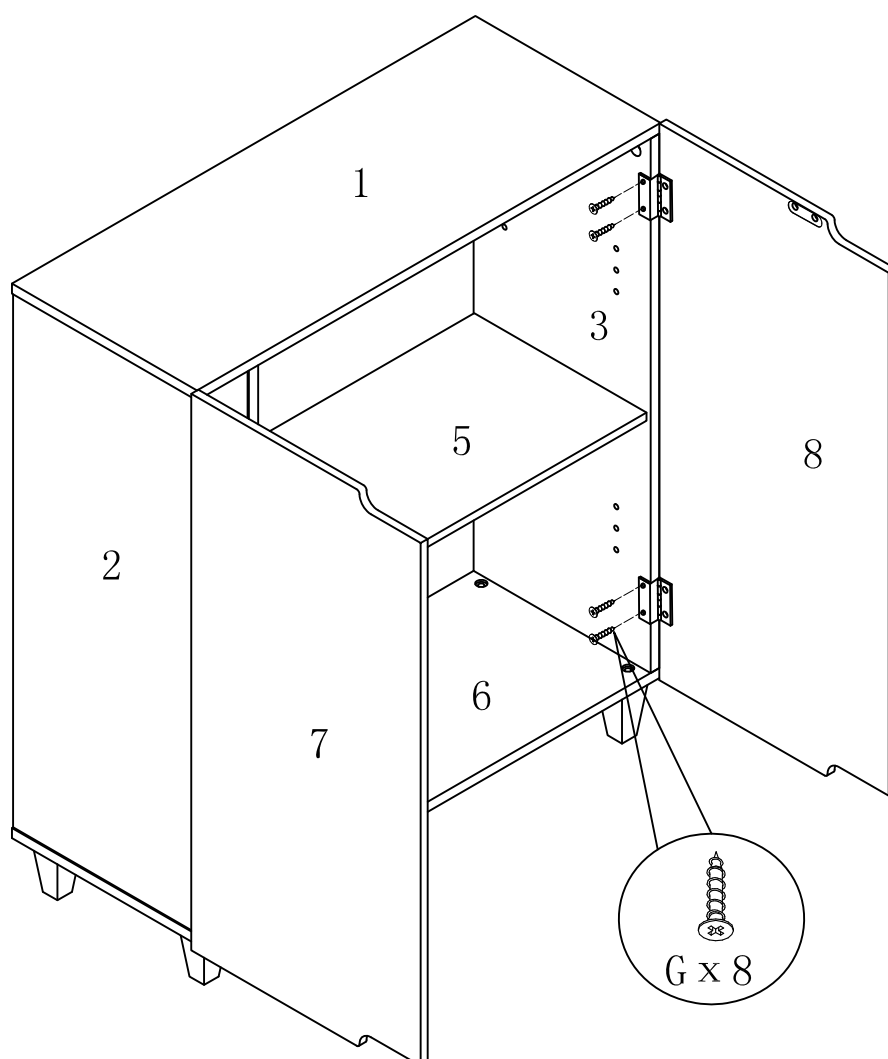

HARDWARE IDENTIFICATION

ITEM#:88454 263496


STEP11

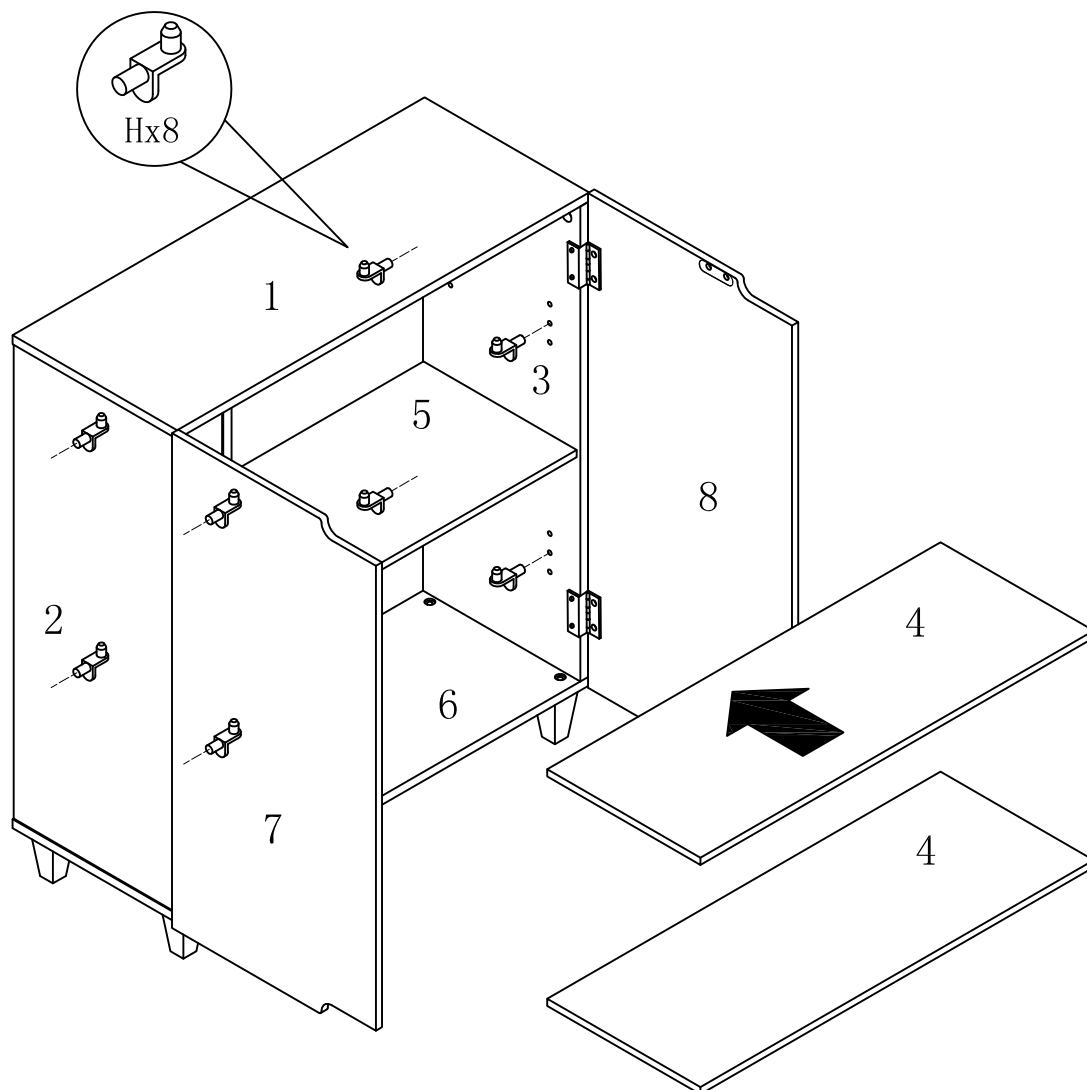

HARDWARE IDENTIFICATION


ITEM#:88454 263496

STEP12

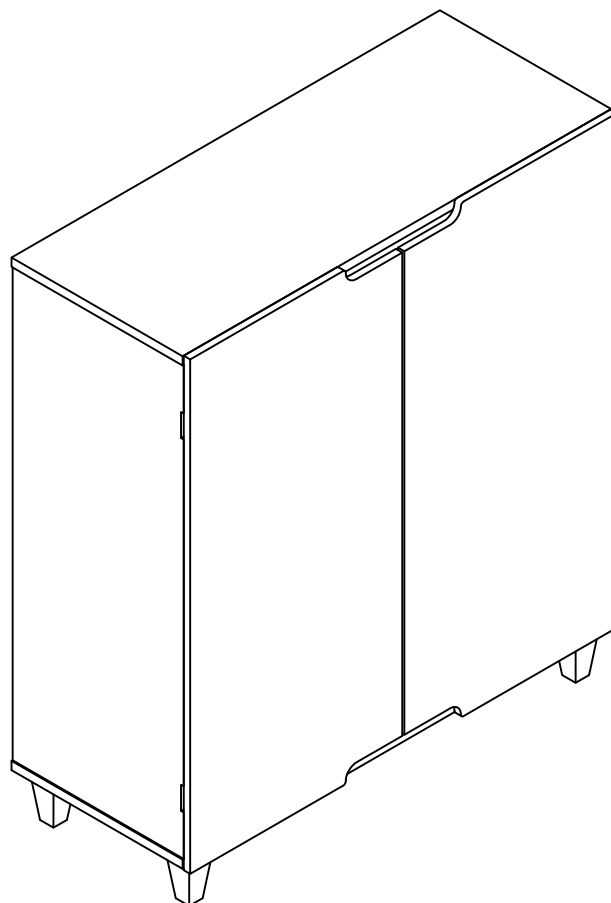


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 14 \times 36 \times 1$ PC



METAL BRACKETS $12 \times 12 \times 1 \times 2$ PCS



DRYWALL SCREW $\phi 5 \times 40 \times 1$ PC




STRAP $\phi 4.5 \times \phi 1 \times 254 \times 1$ PC



FLATHEAD SCREW $\phi 4 \times 25 \times 1$ PC

TOOLS NEEDED (NOT INCLUDED) :

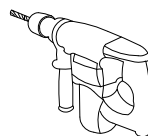


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

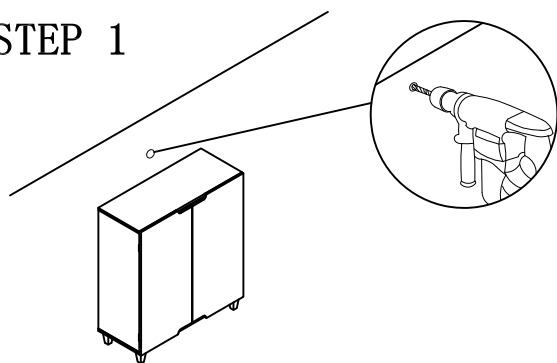


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

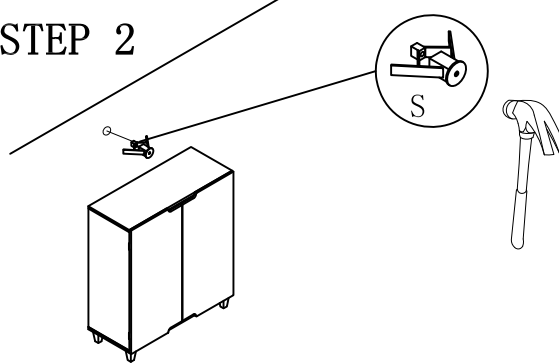


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

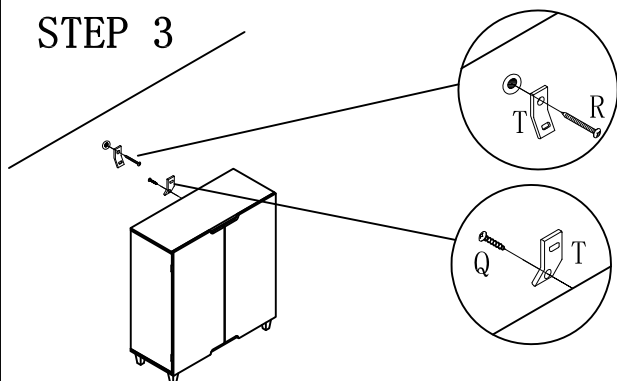

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

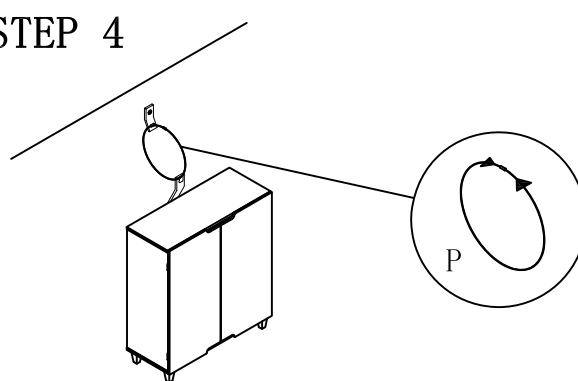

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.